



Niagara N4 legacy drivers 2021 (AX available)

Niagara Driver Pricelist, January 2021

Name	Points	Devices	Part Number
Drivers for BMS / PLC			
Automated Logic WebCTRL for Jace 8000 / 250 points	250	Unlimited	ALC-J8-250
Automated Logic WebCTRL for Jace 8000 / 1000 points	1000	Unlimited	ALC-J8-1000
Automated Logic WebCTRL for Jace 8000 / unlimited points	Unlimited	Unlimited	ALC-J8-UNL
Automated Logic WebCTRL for Supervisor	500	Unlimited	ALC-SUP
Automated Logic WebCTRL for Supervisor / extra 500 points	500	Unlimited	ALC-SUP-500
Cylon Unitron for Jace 8000 / 250 points	250	Unlimited	CYL-J8-250
Cylon Unitron for Jace 8000 / 1000 points	1000	Unlimited	CYL-J8-1000
Cylon Unitron for Jace 8000 / unlimited points	Unlimited	Unlimited	CYL-J8-UNL
Cylon Unitron for Supervisor	500	Unlimited	CYL-SUP
Cylon Unitron for Supervisor / extra 500 points	500	Unlimited	CYL-SUP-500
Satchwell Micronet for Jace 8000 / 250 points	250	Unlimited	MNT-J8-250
Satchwell Micronet for Jace 8000 / 1000 points	1000	Unlimited	MNT-J8-1000
Satchwell Micronet for Jace 8000 / unlimited points	Unlimited	Unlimited	MNT-J8-UNL
Satchwell Micronet for Supervisor	500	Unlimited	MNT-SUP
Satchwell Micronet for Supervisor / extra 500 points	500	Unlimited	MNT-SUP-500
Satchwell Satchnet for Jace 8000 / 250 points	250	Unlimited	STN-J8-250
Satchwell Satchnet for Jace 8000 / 1000 points	1000	Unlimited	STN-J8-1000
Satchwell Satchnet for Jace 8000 / unlimited points	Unlimited	Unlimited	STN-J8-UNL
Satchwell Satchnet for Supervisor	500	Unlimited	STN-SUP
Satchwell Satchnet for Supervisor / extra 500 points	500	Unlimited	STN-SUP-500
Sauter EY-modulo2 / EY3600 for Jace 8000 / 250 points	250	Unlimited	EY2-J8-250
Sauter EY-modulo2 / EY3600 for Jace 8000 / 1000 points	1000	Unlimited	EY2-J8-1000
Sauter EY-modulo2 / EY3600 for Jace 8000 / unlimited points	Unlimited	Unlimited	EY2-J8-UNL
Sauter EY-modulo2 / EY3600 for Supervisor	500	Unlimited	EY2-SUP
Sauter EY-modulo2 / EY3600 for Supervisor / extra 500 points	500	Unlimited	EY2-SUP-500
Schneider EcoStruxure for Jace 8000 / 250 points	250	Unlimited	EWS-J8-250
Schneider EcoStruxure for Jace 8000 / 1000 points	1000	Unlimited	EWS-J8-1000
Schneider EcoStruxure for Jace 8000 / unlimited points	Unlimited	Unlimited	EWS-J8-UNL
Schneider EcoStruxure for Supervisor	500	Unlimited	EWS-SUP
Schneider EcoStruxure for Supervisor / extra 500 points	500	Unlimited	EWS-SUP-500

Schneider TAC Xenta for Jace 8000 / 250 points	250	Unlimited	TAC-J8-250
Schneider TAC Xenta for Jace 8000 / 1000 points	1000	Unlimited	TAC-J8-1000
Schneider TAC Xenta for Jace 8000 / unlimited points	Unlimited	Unlimited	TAC-J8-UNL
Schneider TAC Xenta for Supervisor	500	Unlimited	TAC-SUP
Schneider TAC Xenta for Supervisor / extra 500 points	500	Unlimited	TAC-SUP-500
Siemens Desigo PX for Jace 8000 / 250 points	250	Unlimited	DPX-J8-250
Siemens Desigo PX for Jace 8000 / 1000 points	1000	Unlimited	DPX-J8-1000
Siemens Desigo PX for Jace 8000 / unlimited points	Unlimited	Unlimited	DPX-J8-UNL
Siemens Desigo PX for Supervisor	500	Unlimited	DPX-SUP
Siemens Desigo PX for Supervisor / extra 500 points	500	Unlimited	DPX-SUP-500
Siemens Simatic S7 for Jace 8000 / 250 points	250	Unlimited	SS7-J8-05
Siemens Simatic S7 for Jace 8000 / 1000 points	1000	Unlimited	SS7-J8-20
Siemens Simatic S7 for Jace 8000 / unlimited points	Unlimited	Unlimited	SS7-J8-UNL
Siemens Simatic S7 for Supervisor	500	Unlimited	SS7-SUP
Siemens Simatic S7 for Supervisor / extra 500 points	500	Unlimited	SS7-SUP-10
Trend IQ for Jace 8000 / 250 points	250	Unlimited	TND-J8-250
Trend IQ for Jace 8000 / 1000 points	1000	Unlimited	TND-J8-1000
Trend IQ for Jace 8000 / unlimited points	Unlimited	Unlimited	TND-J8-UNL
Trend IQ for Supervisor	500	Unlimited	TND-SUP
Trend IQ for Supervisor / extra 500 points	500	Unlimited	TND-SUP-500
Danfoss ADAP-KOOL for Jace 8000 / 5 devices	Unlimited	5	DAK-J8-05
Danfoss ADAP-KOOL for Jace 8000 / 20 devices	Unlimited	20	DAK-J8-20
Danfoss ADAP-KOOL for Jace 8000 / unlimited devices	Unlimited	Unlimited	DAK-J8-UNL
Danfoss ADAP-KOOL for Supervisor	Unlimited	10	DAK-SUP
Danfoss ADAP-KOOL for Supervisor / extra 10 devices	Unlimited	10	DAK-SUP-10
Grundfos GENIbus for Jace 8000 / 5 devices	Unlimited	5	GNB-J8-05
Grundfos GENIbus for Jace 8000 / 20 devices	Unlimited	20	GNB-J8-20
Grundfos GENIbus for Jace 8000 / unlimited devices	Unlimited	Unlimited	GNB-J8-UNL
Grundfos GENIbus for Supervisor	Unlimited	10	GNB-SUP
Grundfos GENIbus for Supervisor / extra 10 meters	Unlimited	10	GNB-SUP-10
IEC 62056-21 for Jace 8000 / 5 meters	Unlimited	5	IEC-J8-05
IEC 62056-21 for Jace 8000 / 20 meters	Unlimited	20	IEC-J8-20
IEC 62056-21 for Jace 8000 / unlimited meters	Unlimited	Unlimited	IEC-J8-UNL
IEC 62056-21 for Supervisor	Unlimited	10	IEC-SUP
IEC 62056-21 for Supervisor / extra 10 meters	Unlimited	10	IEC-SUP-10
ION Meter for Jace 8000 / 5 meters	Unlimited	5	ION-J8-05
ION Meter for Jace 8000 / 20 meters	Unlimited	20	ION-J8-20
ION Meter for Jace 8000 / unlimited meters	Unlimited	Unlimited	ION-J8-UNL
ION Meter for Supervisor	Unlimited	10	ION-SUP
ION Meter for Supervisor / extra 10 meters	Unlimited	10	ION-SUP-10

OCPD for Jace 8000 / 6 connectors	Unlimited	6	OCP-J8-06
OCPD for Jace 8000 / 20 connectors	Unlimited	20	OCP-J8-20
OCPD for Jace 8000 / unlimited connectors	Unlimited	Unlimited	OCP-J8-UNL
OCPD for Supervisor	Unlimited	10	OCP-SUP
OCPD for Supervisor / extra 10 connectors	Unlimited	10	OCP-SUP-10
Rotronic for Jace 8000 / 5 sensors	Unlimited	5	RTR-J8-05
Rotronic for Jace 8000 / 20 sensors	Unlimited	20	RTR-J8-20
Rotronic for Jace 8000 / unlimited sensors	Unlimited	Unlimited	RTR-J8-UNL
Rotronic for Supervisor	Unlimited	10	RTR-SUP
Rotronic for Supervisor / extra 10 sensors	Unlimited	10	RTR-SUP-10
Vaisala HMT140 for Jace 8000 / 5 sensors	Unlimited	5	VSL-J8-05
Vaisala HMT140 for Jace 8000 / 20 sensors	Unlimited	20	VSL-J8-20
Vaisala HMT140 for Jace 8000 / unlimited sensors	Unlimited	Unlimited	VSL-J8-UNL
Vaisala HMT140 for Supervisor	Unlimited	10	VSL-SUP
Vaisala HMT140 for Supervisor / extra 10 sensors	Unlimited	10	VSL-SUP-10

Notes (for above drivers only!)

1. All drivers could be deployed on JACE and, often, on Supervisor. Licenses are bound to JACE or Supervisor Host IDs, please provide them when ordering.
2. Drivers for building management system are licensed based on **the number of points**; drivers for smart devices are licensed based on **the number of devices**. OCPD driver is licensed based on **the number of connectors** – EV charging plugs. EV chargers can have 1, 2 or more plugs each.
3. Drivers for JACE are licenced for a certain number of points or devices. For Supervisor please order one main license and any number of extra licenses. E.g. to deploy Sauter driver on Supervisor with 1500 points, order one DR-N4-EY2-SUP and two DR-N4-EY2-SUP-500 licenses.
4. All drivers are compatible with all OEM versions of Niagara JACE: Vykon JACE, Honeywell Hawk, Trend TONN, JCI FX, Distech Controls EC-Net, GC5 etc.

Niagara AX drivers are available on request. **PLEASE CHANGE PART NUMBER FROM N4 TO AX.** Prices may differ from N4 driver prices! **For drivers below**



Allen Bradley CSPV4 Driver for Jace 3 or 500 points limit JACE 8000	Allen Bradley CSPV4 TCP Driver	DR-ML-CSPV4-N4-J3
Allen Bradley CSPV4 Driver for Jace 6 or 1000 points limit JACE 8000	Allen Bradley CSPV4 TCP Driver	DR-ML-CSPV4-N4-J6
Allen Bradley CSPV4 Driver for Jace 7 or 2000 points limit JACE 8000	Allen Bradley CSPV4 TCP Driver	DR-ML-CSPV4-N4-J7
Allen Bradley CSPV4 Driver for Jace 8000 unlimited points.	Allen Bradley CSPV4 TCP Driver	DR-ML-CSPV4-N4-J8
Allen Bradley CSPV4 Driver for WS	Allen Bradley CSPV4 TCP Driver. Work With S-N4. Without points limitation.	DR-ML-CSPV4-N4-WS
Allen Bradley CIP Driver for Jace 3 or 500 points limit JACE 8000	Allen Bradley CIP Driver	DR-ML-CIP-N4-J3
Allen Bradley CIP Driver for Jace 6 or 1000 points limit JACE 8000	Allen Bradley CIP Driver	DR-ML-CIP-N4-J6
Allen Bradley CIP Driver for Jace 7 or 2000 points limit JACE 8000	Allen Bradley CIP Driver	DR-ML-CIP-N4-J7
Allen Bradley CIP Driver for Jace 8000 unlimited points.	Allen Bradley CIP Driver	DR-ML-CIP-N4-J8
Allen Bradley CIP Driver for WS	Allen Bradley CIP TCP Driver. Work With S-N4. Without points limitation.	DR-ML-CIP-N4-WS

ASI Driver for Jace 3 or 500 points limit JACE 8000	ASI Controller's Driver, Supported devices, 6000, 8055, 8255, 8355, 8655, 8755	DR-ML-ASI-N4-J3
ASI Driver for Jace 6 or 1000 points limit JACE 8000	ASI Controller's Driver, Supported devices, 6000, 8055, 8255, 8355, 8655, 8755	DR-ML-ASI-N4-J6
ASI Driver for Jace 7 or 2000 points limit JACE 8000	ASI Controller's Driver, Supported devices, 6000, 8055, 8255, 8355, 8655, 8755	DR-ML-ASI-N4-J7
ASI Driver for Jace 8000 unlimited points.	ASI Controller's Driver, Supported devices, 6000, 8055, 8255, 8355, 8655, 8755	DR-ML-ASI-N4-J8
Barber Colman ASD Driver for Jace 3 or 500 points limit JACE 8000	Barber Colman ASD driver for PEM, MZII, MNASDi and etc. Features Learn and	DR-ML-ASD-N4-J3
Barber Colman ASD Driver for Jace 6 or 1000 points limit JACE 8000	Barber Colman ASD driver for PEM, MZII, MNASDi and etc. Features Learn and	DR-ML-ASD-N4-J6
Barber Colman ASD Driver for Jace 7 or 2000 points limit JACE 8000	Barber Colman ASD driver for PEM, MZII, MNASDi and etc. Features Learn and	DR-ML-ASD-N4-J7
Barber Colman ASD Driver for Jace 8000 unlimited points.	Barber Colman ASD driver for PEM, MZII, MNASDi and etc. Features Learn and	DR-ML-ASD-N4-J8
Barber Colman GCM Driver for Jace 3 or 500 points limit JACE 8000	Barber Colman GCM Driver. Able to perform	DR-ML-GCM-N4-J3
Barber Colman GCM Driver for Jace 6 or 1000 points limit JACE 8000	Barber Colman GCM Driver. Able to perform	DR-ML-GCM-N4-J6
Barber Colman GCM Driver for Jace 7 or 2000 points limit JACE 8000	Barber Colman GCM Driver. Able to perform	DR-ML-GCM-N4-J7
Barber Colman GCM Driver for Jace 8000 unlimited points.	Barber Colman GCM Driver. Able to perform Serial Tunneling.	DR-ML-GCM-N4-J8
Clipsal Cgate TCP Driver for Jace 3 or 500 points limit JACE 8000	Clipsal (now Schneider) Cgate TCP driver. Support Cgate version 1.5.3-1.9	DR-ML-CGATE-N4-J3
Clipsal Cgate TCP Driver for Jace 6 or 1000 points limit JACE 8000	Clipsal (now Schneider) Cgate TCP driver. Support Cgate version 1.5.3-1.9	DR-ML-CGATE-N4-J6
Clipsal Cgate TCP Driver for Jace 7 or 2000 points limit JACE 8000	Clipsal (now Schneider) Cgate TCP driver. Support Cgate version 1.5.3-1.9	DR-ML-CGATE-N4-J7

Clipsal Cgate TCP Driver for Jace 8000 unlimited points.	Clipsal (now Schneider) Cgate TCP driver. Support Cgate version 1.5.3-1.9	DR-ML-CGATE-N4-J8
Clipsal Cgate TCP Driver for N4 Supervisor	Clipsal (now Schneider) Cgate TCP driver. Works with S-N4-Without point limitation	DR-ML-CGATE-N4-WS
Clipsal Cbus Driver for Jace 3 or 500 points limit JACE 8000	Clipsal (now Schneider) Cbus driver, Connect with CBUS CNI, support RS485 and TCP Comms	DR-ML-CLCBUS-N4-J3
Clipsal Cbus Driver for Jace 6 or 1000 points limit JACE 8000	Clipsal (now Schneider) Cbus driver, Connect with CBUS CNI, support RS485 and TCP Comms	DR-ML-CLCBUS-N4-J6
Clipsal Cbus Driver for Jace 7 or 2000 points limit JACE 8000	Clipsal (now Schneider) Cbus driver, Connect with CBUS CNI, support RS485 and TCP Comms	DR-ML-CLCBUS-N4-J7
Clipsal Cbus Driver for Jace 8000 unlimited points.	Clipsal (now Schneider) Cbus driver, Connect with CBUS CNI, support RS485 and TCP Comms	DR-ML-CLCBUS-N4-J8
Clipsal Cbus Driver for N4 Supervisor.	Clipsal (now Schneider) Cbus driver, Connect with CBUS CNI TCP Comms. Come with 500 points	DR-ML-CLCBUS-N4-WS
Clipsal Cbus Driver for N4 Supervisor. Additional 500 points block.	Additional 500 points for Clipsal (now Schneider) Cbus driver for AX Supervisor	DR-ML-CLCBUS-N4-WS-500
CSI Inet for Jace 3 or 500 points limit JACE 8000	N4 Driver to connect to Legacy CSI TAC I/Net networks. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-INET-N4-J3
CSI Inet for Jace 6 or 1000 points limit JACE 8000	N4 Driver to connect to Legacy CSI TAC I/Net networks. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-INET-N4-J6
CSI Inet for Jace 7 or 2000 points limit JACE 8000	N4 Driver to connect to Legacy CSI TAC I/Net networks. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-INET-N4-J7
CSI Inet for Jace 8000 unlimited points.	AX Driver to connect to Legacy CSI TAC I/Net networks. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-INET-N4-J8

Honeywell Cbus TCP Driver for Jace 3 or 500 points limit JACE 8000	Honeywell Cbus TCP Driver. The driver needs 1x Gateway for each bus for 31 Cbus devices /Type	DR-ML-CBUSTCP-N4-J3
Honeywell Cbus TCP Driver for Jace 6 or 1000 points limit JACE 8000	Honeywell Cbus TCP Driver. The driver needs 1x Gateway for each bus for 31 Cbus devices /Type	DR-ML-CBUSTCP-N4-J6
Honeywell Cbus TCP Driver for Jace 7 or 2000 points limit JACE 8000	Honeywell Cbus TCP Driver. The driver needs 1x Gateway for each bus for 31 Cbus devices /Type	DR-ML-CBUSTCP-N4-J7
Honeywell Cbus TCP Driver for Jace 8000 unlimited points.	Honeywell Cbus TCP Driver. The driver needs 1x Gateway for each bus for 31 Cbus devices /Type	DR-ML-CBUSTCP-N4-J8
Honeywell Cbus TCP Driver for N4 Supervisor	N4 Supervisor Cbus TCP Driver, includes license	DR-ML-CBUSTCP-N4-WS
Honeywell Cbus TCP Driver for N4 Supervisor, additional 500 point block	Additional 500 point block for N4 Supervisor Cbus	DR-ML-CBUSTCP-N4-500
Innotech driver for Jace 3 or 500 points limit JACE 8000	Innotech driver. With Learn and Discover functions. Connect direct	DR-ML-INNO-N4-J3
Innotech driver for Jace 6 or 1000 points limit JACE 8000	Innotech driver. With Learn and Discover functions. Connect direct	DR-ML-INNO-N4-J6
Innotech driver for Jace 7 or 2000 points limit JACE 8000	Innotech driver. With Learn and Discover functions. Connect direct	DR-ML-INNO-N4-J7
Innotech driver for Jace 8000 unlimited points.	Innotech driver. With Learn and Discover functions. Connect direct	DR-ML-INNO-N4-J8
Johnson N2 Open driver for Jace 3 or 500 points limit JACE 8000	Johnson N2 Open driver. With Learn and Discover functions	DR-ML-N2-N4-J3
Johnson N2 Open driver for Jace 6 or 1000 points limit JACE 8000	Johnson N2 Open driver. With Learn and Discover functions	DR-ML-N2-N4-J6
Johnson N2 Open driver for Jace 7 or 2000 points limit JACE 8000	Johnson N2 Open driver. With Learn and Discover functions	DR-ML-N2-N4-J7
Johnson N2 Open driver for Jace 8000 unlimited points.	Johnson N2 Open driver. With Learn and Discover functions	DR-ML-N2-N4-J8
Johnson N2 Slave TCP Driver for Jace 3 or 500 points limit JACE 8000	Johnson N2 Slave TCP Driver. Able to convert JACE to become part of Johnson VND device. Required MIG-N2Slave Gateway to work. MIG-N2Slave to be purchase	DR-ML-N2SivTCP-N4-J3

Johnson N2 Slave TCP Driver for Jace 6 or 1000 points limit JACE 8000	Johnson N2 Slave TCP Driver. Able to convert JACE to become part of Johnson VND device. Required MIG-N2Slave Gateway to work. MIG-N2Slave to be purchase	DR-ML-N2SlvTCP-N4-J6
Johnson N2 Slave TCP Driver for Jace 7 or 2000 points limit JACE 8000	Johnson N2 Slave TCP Driver. Able to convert JACE to become part of Johnson VND device. Required MIG-N2Slave Gateway to work. MIG-N2Slave to be purchase	DR-ML-N2SlvTCP-N4-J7
Johnson N2 Slave TCP Driver for Jace 8000 unlimited points.	Johnson N2 Slave TCP Driver. Able to convert JACE to become part of Johnson VND device. Required MIG-N2Slave Gateway to work. MIG-N2Slave to be purchase	DR-ML-N2SlvTCP-N4-J8
Modbus RTU/TCP Driver for JACE 3,6,7,8	Modbus driver for JACE 3,6,7 and 8. Able to handle both TCP and RTU both in 1 driver. Both can run concurrently	DR-ML-MDBS- J-N4
Modbus TCP Driver for N4 Supervisor	Modbus TCP driver for N4 Supervisor. Comes with 500 points block.	DR-ML-MDBS-SUP-N4
Modbus TCP Driver for N4 Supervisor -addon 500 pts	Additional 500 point block for N4 Supervisor Modbus TCP Driver. Addon 500 points for DR-	DR-ML-MDBS-SUP-N4-500
Modbus TCP Driver for N4 Supervisor with unlimited points count.	Modbus TCP driver for N4 Supervisor. Unlimited Points count.	DR-ML-MDBS-SUP-N4-UL
Novar Driver for Jace 3 or 500 points limit JACE 8000.	Novar RS232 Driver. Works with existing EP/2 Gateway. Support UVC 03, UVC 11 and VAV 4020. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-Novar-N4-J3
Novar Driver for Jace 6 or 1000 points limit JACE 8000.	Novar RS232 Driver. Works with existing EP/2 Gateway. Support UVC 03, UVC 11 and VAV 4020. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-Novar-N4-J6

Novar Driver for for Jace 7 or 2000 points limit JACE 8000.	Novar RS232 Driver. Works with existing EP/2 Gateway. Support UVC 03, UVC 11 and VAV 4020. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-Novar-N4-J7
Novar Driver for Jace 8000 unlimited points.	Novar RS232 Driver. Works with existing EP/2 Gateway. Support UVC 03, UVC 11 and VAV 4020. Required NPB-RS232 or MIG-RS232 Gateway to work with	DR-ML-Novar-N4-J8
Novar TCP Driver for Jace 3 or 500 points limit JACE 8000.	Novar TCP Driver. Works with Lingo XE.	DR-ML-NovarTCP-N4-J3
Novar TCP Driver for Jace 6 or 1000 points limit JACE 8000.	Novar TCP Driver. Works with Lingo XE.	DR-ML-NovarTCP-N4-J6
Novar TCP Driver for for Jace 7 or 2000 points limit JACE 8000.	Novar TCP Driver. Works with Lingo XE.	DR-ML-NovarTCP-N4-J7
Novar TCP Driver for Jace 8000 unlimited points.	Novar TCP Driver. Works with Lingo XE.	DR-ML-NovarTCP-N4-J8
Omron Fins driver for Jace 3 or 500 points limit JACE 8000	Omron Fins driver. Support Fins CV series devices. Without Learn	DR-ML-OMRON-N4-J3
Omron Fins driver for Jace 6 or 1000 points limit JACE 8000	Omron Fins driver. Support Fins CV series devices. Without Learn	DR-ML-OMRON-N4-J6
Omron Fins driver for Jace 7 or 2000 points limit JACE 8000	Omron Fins driver. Support Fins CV series devices. Without Learn	DR-ML-OMRON-N4-J7
Omron Fins driver for Jace 8000 unlimited points.	Omron Fins driver. Support Fins CV series devices. Without Learn	DR-ML-OMRON-N4-J8
OPC DA Server Driver for N4 Supervisor	OPC Server driver, Exporting all niagara Points into OPC Client. Enable OPC client to import OPC points from N4 Supervisor. includes license for 500 points	DR-ML-OPC-SR-N4
OPC DA Server Driver for N4 Supervisor, additional 500 point block	Additional 500 point block for OPC Server Driver.	DR-ML-OPC-SR-N4-500




Robertshaw Microsmart TCP Driver for Jace 3 or 500 points limit JACE 8000	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn and Discover functions. Required MIG-Microsmart Gateway to work with MIG-Microsmart	DR-ML-MSTCP-N4-J3
Robertshaw Microsmart TCP Driver for Jace 6 or 1000 points limit JACE 8000	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn and Discover functions. Required MIG-Microsmart Gateway to work with MIG-Microsmart	DR-ML-MSTCP-N4-J6
Robertshaw Microsmart TCP Driver for Jace 7 or 2000 points limit JACE 8000	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn and Discover functions. Required MIG-Microsmart Gateway to work with MIG-Microsmart	DR-ML-MSTCP-N4-J7
Robertshaw Microsmart TCP Driver for Jace 8000 unlimited points.	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn and Discover functions. Required MIG-Microsmart Gateway to work with MIG-Microsmart	DR-ML-MSTCP-N4-J8
Robertshaw Microsmart TCP Driver for N4 Supervisor	N4 Supervisor Microsmart TCP Driver, includes license for 500 Cbus RS485 points. Able to learn and discover points, without a JACE, directly to the N4	DR-ML-MSTCP-N4-WS
Robertshaw Microsmart TCP Driver for AX Supervisor, additional 500 point block	Additional 500 point block for N4 Supervisor Microsmart TCP Driver	DR-ML-MSTCP-N4-500
Robertshaw DMS Driver for Jace 3 or 500 points limit JACE 8000	Robertshaw DMS Driver. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB-RS232 or MIG-	DR-ML-DMS-N4-J3
Robertshaw DMS Driver for Jace 6 or 1000 points limit JACE 8000	Robertshaw DMS Driver. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB-RS232 or MIG-	DR-ML-DMS-N4-J6

Robertshaw DMS Driver for Jace 7 or 2000 points limit JACE 8000	Robertshaw DMS Driver. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB-RS232 or MIG-	DR-ML-DMS-N4-J7
Robertshaw DMS Driver for Jace 8000 unlimited points.	Robertshaw DMS Driver. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB-RS232 or MIG-	DR-ML-DMS-N4-J8
Siemens P1 DC4 Driver for Jace 3 or 500 points limit JACE 8000	Siemens P1 DC4 Driver. Connects directly to RS485 DC4 devices. Only work with JACE onboard 1x RS485 port. Additional	DR-ML-DC4-N4-J3
Siemens P1 DC4 Driver for Jace 6 or 1000 points limit JACE 8000	Siemens P1 DC4 Driver. Connects directly to RS485 DC4 devices. Only work with JACE onboard 1x RS485 port. Additional	DR-ML-DC4-N4-J6
Siemens P1 DC4 Driver for Jace 7 or 2000 points limit JACE 8000	Siemens P1 DC4 Driver. Connects directly to RS485 DC4 devices. Only work with JACE onboard 1x RS485 port. Additional	DR-ML-DC4-N4-J7
Siemens P1 DC4 Driver for Jace 8000 unlimited points.	Siemens P1 DC4 Driver. Required to work with MIG-DC4 purchase	DR-ML-DC4-N4-J8
Siemens Apogee 600 TEC UC Driver for Jace 3 or 500 points limit JACE 8000	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects directly to	DR-ML-TEC-N4-J3
Siemens Apogee 600 TEC UC Driver for Jace 6 or 1000 points limit JACE 8000	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects directly to	DR-ML-TEC-N4-J6
Siemens Apogee 600 TEC UC Driver for Jace 7 or 2000 points limit JACE 8000	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects directly to	DR-ML-TEC-N4-J7
Siemens Apogee 600 TEC UC Driver for Jace 8000 unlimited points.	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects directly to	DR-ML-TEC-N4-J8
SMS Driver for N4 Supervisor and JACE 3,6,7,8	SMS Driver that support Multigroup and Multimobile. With Acknowledge function. Work with JACE and WS. Work with Navigate GSM/3G modem	DR-ML-SMS-N4

Steafa Smart 2 Driver for Jace 3 or 500 points limit JACE 8000	Steafa Smart 2 Driver, AETI-485 converter to purchase separately.	DR-ML-SM2-N4-J3
Steafa Smart 2 Driver for Jace 6 or 1000 points limit JACE 8000	Steafa Smart 2 Driver, AETI-485 converter to purchase separately.	DR-ML-SM2-N4-J6
Steafa Smart 2 Driver Jace 7 or 2000 points limit JACE 8000	Steafa Smart 2 Driver, AETI-485 converter to purchase separately.	DR-ML-SM2-N4-J7
Steafa Smart 2 Driver for Jace 8000 unlimited points.	Steafa Smart 2 Driver, AETI-485 converter to purchase separately.	DR-ML-SM2-N4-J8
TAP Pager Driver for Jace 3 or 500 points limit JACE 8000	TAP (Telocator Alphanumeric Protocol) RS232 Driver. For TAP	DR-ML-Tap-N4-J3
TAP Pager Driver for Jace 6 or 1000 points limit JACE 8000	TAP (Telocator Alphanumeric Protocol) RS232 Driver. For TAP	DR-ML-Tap-N4-J6
TAP Pager Driver Jace 7 or 2000 points limit JACE 8000	TAP (Telocator Alphanumeric Protocol) RS232 Driver. For TAP	DR-ML-Tap-N4-J7
TAP Pager Driver for Jace 8000 unlimited points.	TAP (Telocator Alphanumeric Protocol) RS232 Driver. For TAP	DR-ML-Tap-N4-J8
TAP Pager Driver for AX Supervisor come with 500 points.	TAP (Telocator Alphanumeric Protocol) RS232 Driver. For TAP Paging services. Comes with 500 points. Required USR-TCP232 Gateway to work. USR-TCP232 to be	DR-ML-TAP-AX-WS
TAP Pager Driver for AX Supervisor. Additional 500 points add on.	TAP (Telocator Alphanumeric Protocol) RS232 Driver. Additional	DR-ML-TAP-AX-WS-500
TAP Pager Driver for AX Supervisor come with unlimited points count.	TAP (Telocator Alphanumeric Protocol) RS232 Driver. For TAP Paging services. With unlimited Points count. Required USR-TCP232 Gateway to work. USR-	DR-ML-TAP-AX-WS-UL
TCOM Driver for JACE 3,6,7,8	TCOM driver allowing for Niagara communication to EasyIO Controllers, enables schedule and histories integration	DR-ML-TCOM- J-N4

TCOM Driver for N4 Supervisor	TCOM driver allowing for Niagara communication to EasyIO, enables schedule and histories integration. Includes 500	DR-ML-TCOM-SUP-N4
TCOM Driver for N4 Supervisor -500 pts	Additional 500 point block for N4 Supervisor TCOM Driver	DR-ML-TCOM-SUP-N4-500
TCOM Driver for N4 Supervisor Unlimited Point Count	TCOM driver allowing for Niagara communication to EasyIO, enables schedule and histories integration. Unlimited	DR-ML-TCOM-SUP-N4-UL
TCOMAX driver for N4 Supervisor	TCOMAX driver allowing Niagara N4 Supervisor communication with Niagara R2 JACE. Read/Write point. Support COV and polling, Discover point and Schedule. Each Purchase of TcomAX Driver comes	DR-ML-TCOMAX-SUP-N4
TCOMAX Driver for N4 Supervisor -500 pts	Additional 500 point block for N4 Supervisor TCOMAX Driver	DR-ML-TCOMAX-SUP-N4-500
TCOMAX Driver for AX Supervisor Unlimited Point Count	TCOMAX driver allowing Niagara N4 Supervisor communication with Niagara R2 JACE. Read/Write point. Support COV and polling, Discover point and	DR-ML-TCOMAX-SUP-N4-UL
Telegram Alarm Messaging Driver for N4 Supervisor and JACE 7,8	Alarm Messaging Driver. Need internet connections.	DR-ML-TGRAM-N4
Trane Comm3 Non Isolated Driver for Jace 3 or 500 points limit JACE 8000	Trane Comm3 Non Isolated driver for VAV Type 1.	DR-ML-NICom3-N4-J3
Trane Comm3 Non Isolated Driver for Jace 6 or 1000 points limit JACE 8000	Trane Comm3 Non Isolated driver for VAV Type 1.	DR-ML-NICom3-N4-J6
Trane Comm3 Non Isolated Driver for Jace 7 or 2000 points limit JACE 8000	Trane Comm3 Non Isolated driver for VAV Type 1.	DR-ML-NICom3-N4-J7
Trane Comm3 Non Isolated Driver for Jace 8000 unlimited points.	Trane Comm3 Non Isolated driver for VAV Type 1.	DR-ML-NICom3-N4-J8

Trane Comm4 Driver for Jace 3 or 500 points limit JACE 8000	Trane Comm4 driver	DR-ML-TComm4-N4-J3
Trane Comm4 Driver for Jace 6 or 1000 points limit JACE 8000	Trane Comm4 driver	DR-ML-TComm4-N4-J6
Trane Comm4 Driver for Jace 7 or 2000 points limit JACE 8000	Trane Comm4 driver	DR-ML-TComm4-N4-J7
Trane Comm4 Driver for Jace 8000 unlimited points.	Trane Comm4 driver.	DR-ML-TComm4-N4-J8
Trend IQ2 Serial Driver for Jace 3 or 500 points limit JACE 8000	Trend IQ2 Serial Driver. Able to learn and discover points. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB-RS232 or MIG-	DR-ML-IQ-N4-J3
Trend IQ2 Serial Driver for Jace 6 or 1000 points limit JACE 8000	Trend IQ2 Serial Driver. Able to learn and discover points. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB- RS232 or MIG-RS232 to	DR-ML-IQ-N4-J6
Trend IQ2 Serial Driver for Jace 7 or 2000 points limit JACE 8000	Trend IQ2 Serial Driver. Able to learn and discover points. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB- RS232 or MIG-RS232 to	DR-ML-IQ-N4-J7
Trend IQ2 Serial Driver for Jace 8000 unlimited points.	Trend IQ2 Serial Driver. Able to learn and discover points. Required NPB-RS232 or MIG-RS232 Gateway to work with JACE 8000 . NPB- RS232 or MIG-RS232 to	DR-ML-IQ-N4-J8
Trend IQ3 TCP Driver for Jace 3 or 500 points limit JACE 8000	Trend IQ3 TCP Driver. Able to learn and discover points. Support	DR-ML-IQTCP-N4-J3
Trend IQ3 TCP Driver for Jace 6 or 1000 points limit JACE 8000	Trend IQ3 TCP Driver. Able to learn and discover points. Support	DR-ML-IQTCP-N4-J6
Trend IQ3 TCP Driver for Jace 7 or 2000 points limit JACE 8000	Trend IQ3 TCP Driver. Able to learn and discover points. Support	DR-ML-IQTCP-N4-J7

Trend IQ3 TCP Driver for Jace 8000 unlimited points.	Trend IQ3 TCP Driver. Able to learn and discover points. Support	DR-ML-IQTCP-N4-J8
Trend IQ3 TCP Driver for N4 Supervisor	N4 Supervisor Trend IQ3 Driver, includes license for 500 Trend IQ3 TCP points. Able to learn and discover points, without a	DR-ML-IQTCP-N4-WS
Trend IQ3 TCP Driver for N4 Supervisor, additional 500 point block	Additional 500 point block for N4 Supervisor Trend IQ3 Driver	DR-ML-IQTCP-N4-500
Trend IQ3 TCP Driver for N4 Supervisor Unlimited Points count	N4 Supervisor Trend IQ3 Driver, unlimited points count. Able to learn and discover points, without a JACE, directly to the N4	DR-ML-IQTCP-N4-WS-UL
MIG Microsmart Gateway	RS485 to TCP Gateway for Microsmart TCP driver. Comes with 1x UTEK RS485 Repeater and 12 months limited manufacturer warranty. Add USD30.00 for	MIG-112-Microsmart
MIG CBUS Gateway 	RS485 to TCP Gateway for CBUS TCP driver. Comes with 1x UTEK RS485 Repeater and 12 months limited	MIG-112-CBUS
MIG N2Slave Gateway 	RS485 to TCP Gateway for N2 Slave TCP driver.. Comes with 1x UTEK RS485 Repeater and 12 months limited	MIG-112-N2Slave
MIG DC4 Gateway 	RS485 to TCP Gateway for Siemens P1 DC4 drivers. Comes with 1x UTEK RS485 Repeater and 12 months limited	MIG-112-DC4
MIG Modbus Bridge 	Modbus RTU to TCP drivers. Convert Modbus RTU to TCP. Comes with 1x UTEK RS485 Repeater and 12 months limited manufacturer warranty.	MIG-112-ModbusBridge
MIG RS232 Gateway 	RS232 to TCP Gateway. Comes with 12 months limited manufacturer warranty. Add USD30.00 for delivery.	MIG-112-RS232

<p>Navigate GSM/3G Module</p>	<p>Work with SMS driver. Support GSM/3G Network. Connect direct to JACE 3,6 and 7, 8000, AX/ N4 Supervisor through RS232 or TCP. Warranty 1 year against</p>	<p>Navigate-NR500-S3G-502</p>
<p>UTEK RS485 Repeater</p>	<p>UTEK Industrial RS485 Repeater with isolation. Use with MIG RS485 Comm Port to reduce noise and improve communication cable distance. Warranty 1</p>	<p>UT-2209</p>
<p>USR-TCP232 TCP Gateway.</p>	<p>Convert RS232 to TCP. With Server Function builtin For AX/N4 Supervisor and JACE 8000. Add USD30.00 for</p>	<p>USR-TCP232</p>